


Adjusting Your Radiator

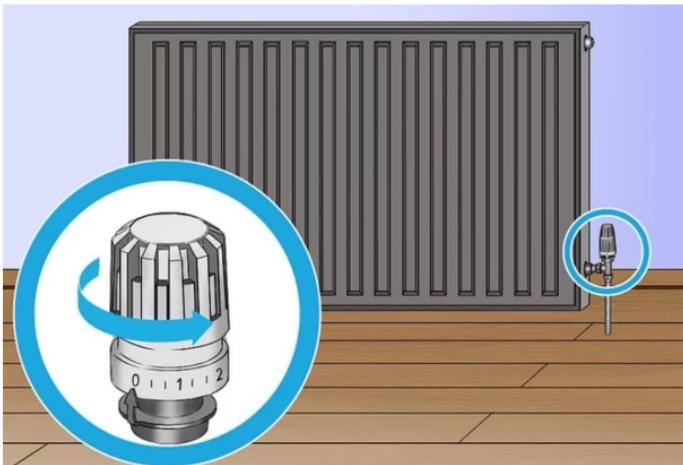

0 * 1 2 3 ● 5 6

closed 6°C 8°C 12°C 16°C 20°C 23°C 26°C

A comfortable temperature range is 18–22 °C.

1. Turn the valve-head anti-clockwise to increase the temperature setting.
2. Turn it clockwise to decrease the temperature setting.
3. In warmer months, where there is no need for heating, the valve should be set to 0.