


OPERATING FEATURES

THE CONTROL PANEL

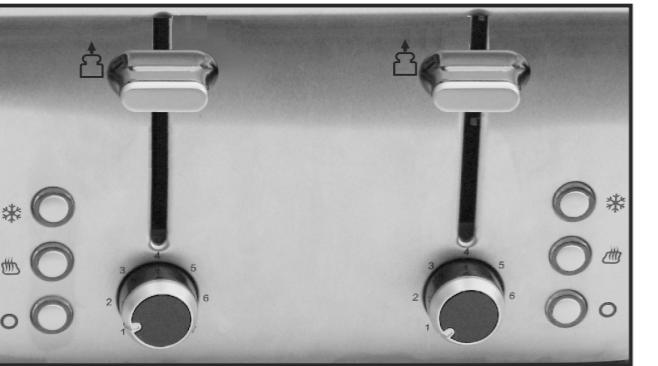

INDEPENDENT TIMER CONTROLS: Turn each control clockwise (higher setting) to increase toasting time and anticlockwise to decrease the time (lower setting).

FROZEN BUTTON : Frozen sliced bread may be defrosted and toasted in one operation. During this cycle extra time is added to compensate for the frozen bread. Adjust the control to the preferred setting, press the FROZEN button and then press the carriage lever to switch on the toaster. The Frozen indicator will glow and the bread will toast as normal.

REHEAT BUTTON : Use the REHEAT button to reheat cooled, toasted bread. Press the REHEAT button and then press the carriage lever down. The Reheat indicator will glow and the bread will be reheated. The toaster will then switch off.


HIGH-LIFT FACILITY: This is useful if you are toasting small slices of bread. After the bread has toasted, lift the carriage lever upward and take out the toast.

Toasting Tips

- Dry, thin slices will toast quicker than moist, thick slices.
- If the toast starts to smoke, press the CANCEL button immediately.
- Never put wrapped, buttered, or items with sugar icing into the toaster.
- **Note:** The maximum thickness that your toaster will accommodate safely in each well is around 2cm, so bear this in mind if you use unsliced bread. Large rolls, etc. should not be inserted into the toaster unless they are sliced first. If you force bread that is too thick into the toaster, the carriage release may be obstructed causing a fire risk.
- Never remove bread which has jammed in the toasting wells without first unplugging the toaster from the mains supply and allowing it to cool. When removing bread or toast from the toaster be careful not to damage the carriage mechanism or the heating elements.
- Allow the toaster 15-20 seconds to cool down between toasting operations.

CRUMB REMOVAL

Your toaster features a crumb tray for each pair of toaster wells which are located at the rear of the toaster. Crumb trays should be emptied at least once a week to minimise the build up of toast crumbs and other debris. To remove a crumb tray, switch the toaster off at the mains supply and allow it to cool. Grip the handle and slide out the crumb tray. After emptying, replace the tray before using the toaster.

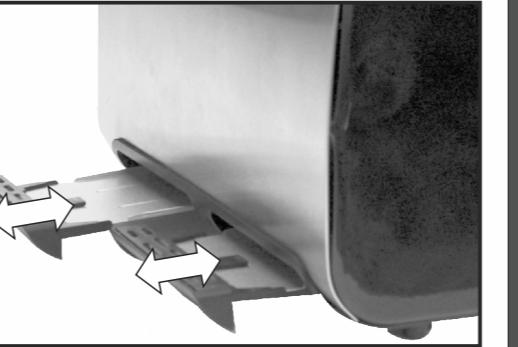

CLEANING & STORAGE

Unplug the toaster from the mains socket. If the toaster is hot allow it to cool fully. Wipe the outside with a soft cloth. If necessary, the body of the toaster may be wiped clean with a slightly damp (not wet) cloth.

Do not immerse any part of this appliance in water or other liquid when cleaning and never use any abrasive cleaners or scourers.

When not in use ensure that the appliance is switched off at the mains.

WARRANTY

Your TESCO appliance is warranted for 12 months from the date of purchase. If a fault develops during this period, please return the unit to your nearest Tesco store together with the original receipt as proof of purchase. This warranty in no way affects your consumer rights.

Voltage Rating: 220-240V AC, 50Hz

Power Consumption: 1400-1600W

Net Weight 2.3kg



THIS APPLIANCE MUST BE EARTHTED

TESCO

Tesco Stores Ltd., Welwyn Garden
City AL7 1GA, U.K.



UK: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities. See www.recycle-more.co.uk or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

TESCO

4 Slice Toaster

4TSS15

4TSSB15

4TSSR15

4TSSW15

4TSSC15

4TSSIB15

4TSSPR15

4TSSMU15



USER GUIDE

SAFETY GUIDE

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is intended to be used in household and similar applications such as: Staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Do not touch the body of the toaster when it is hot.
- Disconnect the appliance at the mains supply when filling or emptying the toaster, before cleaning, adjusting or removing any components, and when it is not in use.
- As a safety feature, the carriage lever will not stay down when the appliance is disconnected from the mains.
- Do not immerse the appliance, connecting cord or plug in water or liquids.
- Do not cover the appliance when it is in use, or has recently been used.
- Do not place this appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not insert oversize items, foil packages or metal implements in the toaster wells.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
- Do not let the connecting cord overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.
- Do not attempt to change the appliance connecting cord. Refer this to qualified service personnel as specialist tools are necessary.
- If any part of this appliance is visibly damaged or malfunctions in any way, or the connecting cord or mains plug is broken do not continue to use it. Take it to a qualified service centre for service and repair.
- Do not use the toaster unless the crumb tray is safely in place.
- Do not use this appliance for other than the intended use.

- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.


RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THE TOASTER SHOULD NOT BE UNATTENDED WHILE IN USE.



WARNING: Some accessible surfaces may be hot during operation of this appliance

ABOUT YOUR TOASTER

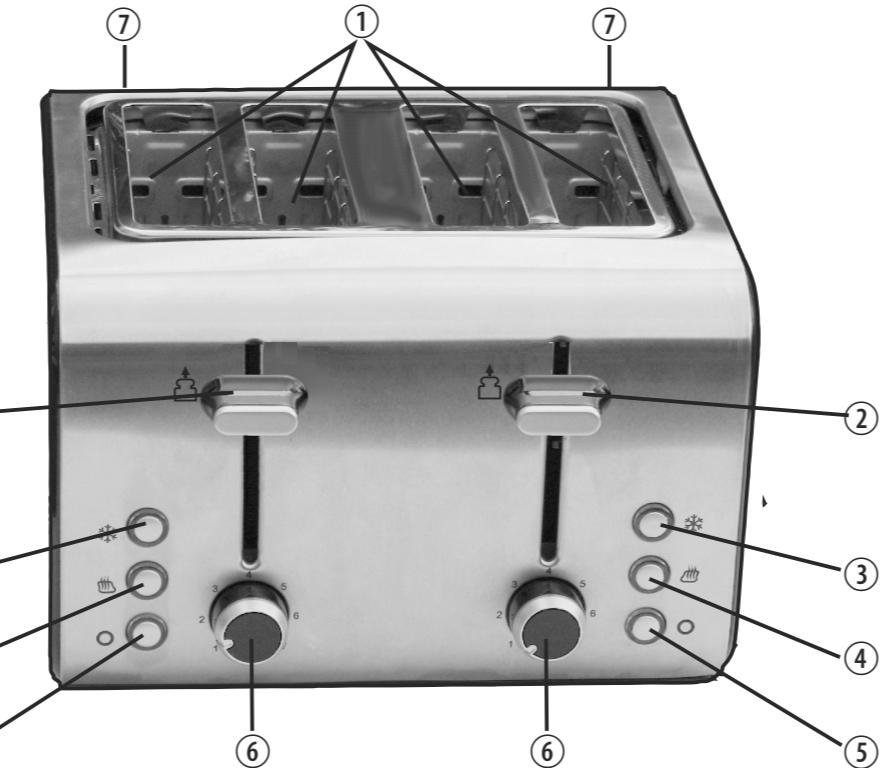

KEY	4: Reheat Button
1: Toasting Slots	5: Cancel Button
2: Carriage Lever	6: Toast Control
3: Frozen Button	7: Crumb Trays (at rear)

PRELIMINARIES

Unpack your toaster carefully. Retain the packaging so that you can transport the appliance safely at a later date.

Before using your toaster:

Check that the voltage marked on the rating plate under the toaster and the base matches your mains voltage: Please read all the instructions in this User Guide with particular reference to the safety notes.

CONNECTING YOUR TOASTER

Place the toaster on a stable, level surface. Make sure the mains cable does not foul the toasterfeet.

USING YOUR TOASTER

Your TESCO toaster can be used to toast a wide variety of bread. As personal preference plays a great part, we suggest that you try different settings. Try the lower settings first, gradually increasing the timer setting until you find the right one for your circumstances.

If bread smokes then use a lower setting to stop it burning.

BASIC OPERATION

Ensure that the mains socket is switched off at the wall and connect the appliance cord to the wall socket. Now switch on the power.

The two sets of controls can be used to toast different types of bread or to set different browning levels. Set each timer control to the desired setting. Press each carriage down gently until it latches. The toasting cycle will commence. If the mains power to the appliance is off, the carriage levers will not stay down.

When the bread has toasted, the carriage will 'pop up' and the toaster will switch off. The toast can now be safely removed from the toaster.

A small spark may be visible when the toaster switches off. This is normal as the switch disconnects.

At any time the toasting cycle can be stopped by pressing the CANCEL button.

The toast will pop up and the toaster will switch off.

Note: If you interrupt the toasting cycle, always use the CANCEL button. Do NOT force the carriage lever up or you may damage the appliance.

Never remove bread while it is toasting. Press the correct CANCEL button first.